SC-507 Security Kit
INSTALLATION MANUAL

Applied Machines: d-Color MF360/MF280/MF220
COLOR MFP: 36 ppm/28 ppm/22 ppm
Product Code: A0ED

I. Accessory parts

No.	Name	Shape	Q'ty
1.	DSC board	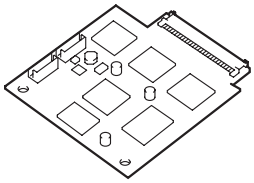 A0Y9IXC001DA	1
2.	Screw B (3 × 6 mm)	4040IXC046DA	2
3.	Installation manual	 4980IXC019DA	1 set

⚠WARNING

After unpacking, be sure to get rid of the packaging materials and keep them out of the reach of children.

Putting the head in the plastic bag involves danger of suffocation.

Note:

This manual provides the illustrations of the accessory parts and machine that may be slightly different in shape from yours. In that case, instead of the illustrations, use the appearance of your machine to follow the installation procedure. This does not cause any significant change or problem with the procedure.

II. Installation procedures

1. Turn off the machine and unplug the power cord from the power outlet.
2. Remove the cover from the right side of the machine as shown in the illustration (four screws).

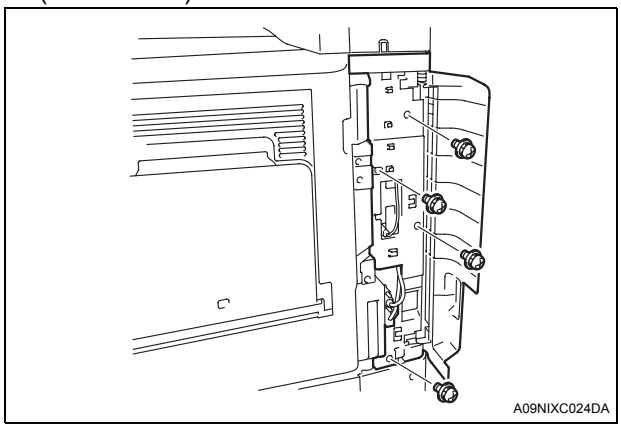
A09NIXC024DA

3. Remove the shield cover (two screws).

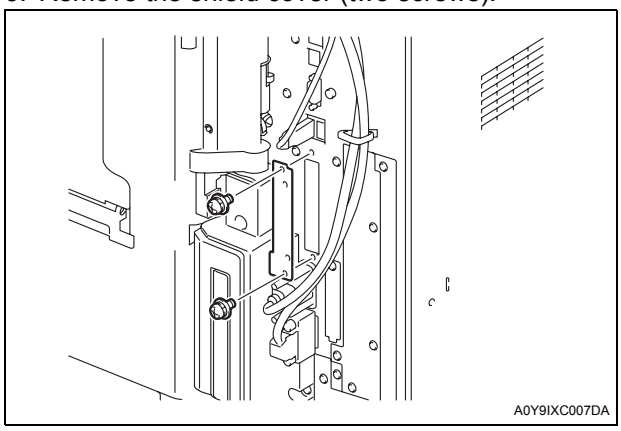
A0Y9IXC007DA

4. Attach the furnished DSC board to the shield cover removed in step 3 (Furnished two screws)

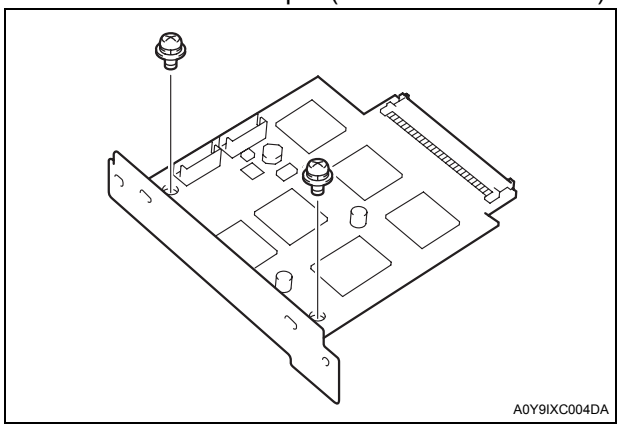

5. Insert the DSC board and secure it with two screws.

Note:

- When inserting the board, align it with the slits.
- Use the screws removed in step 3.

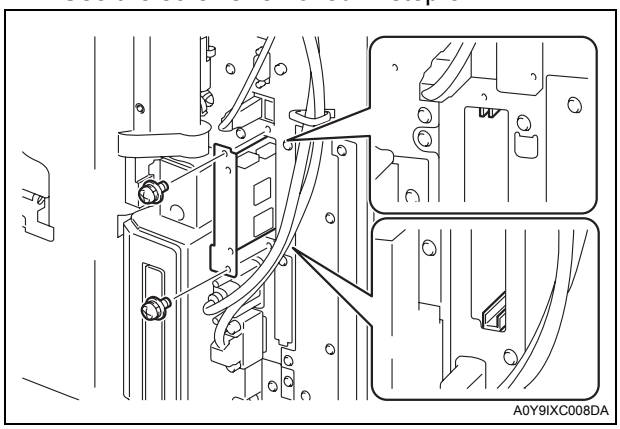

6. Reinstall the cover removed in step 2 (four screws).

III. Setting the security kit

1. Plug the power cord into the power outlet and turn on the machine.
2. Display the Service Mode screen.
   (For details of how to display the Service Mode screen, see the service manual.)
3. Touch “System 2.”
4. Touch “Option Board Status.”
5. Touch “Set" of DSC1.
6. Touch “END.”

IV. Security setting

Note:

The following setting should be performed by the Administrator.

1. Select the function to be used as follows:
   Utility/Counter → Administrator Settings → Enter the Administrator Password → Security Settings → Security Details
2. Touch ▼ two times.
3. Touch “Copy Guard.”
4. Touch “Yes.”
5. Touch “Password Copy.”
6. Touch “Yes.”
7. Touch “OK.”
8. Turn OFF and ON the Main Power Switch.